

safer and **Sekura**

X

CE

🛄 User Guide

O Loading Merchandise into Safer



Open the safer by pulling apart.






Insert merchandise.






Locate the sliding tab on the lock bar. Slide it across to secure the safer. Product is now ready to be displayed.

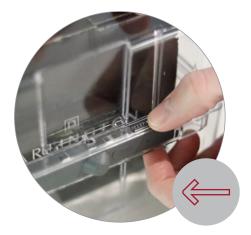



Close the safer.

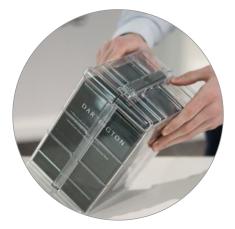



sekura-global.com E: sales@sekura-global.com

🔑 Releasing Merchandise from Safer

Place the lock bar onto the detacher. There will be a 'click' as the lock releases.



If the safer does not unlock immediately, slide the tab to unlock.







Product is now ready to be sold.



Open the two halves of the safer and

remove the merchandise.



WARNING: The *MegaLoc*[™] Detacher is a high powered magnet and can damage credit cards or other electronic devices if in close proximity.

People with pacemakers should exercise caution when using the **MegaLoc™** detacher.

Head Office

Aspen House Stephenson Road Colchester, Essex CO4 9QR United Kingdom Sekura Global LLC 98 Cuttermill Road Suite 466 S Great Neck NY 11021 USA Sekura Global GmbH Alt-Heerdt 104 40549 Düsseldorf Germany Sekura Global PTY LTD Level 6 10 Herb Elliott Ave 2127, NSW Australia Sekura Retail Solutions INC 2416 Main Street Suite 398 Vancouver BC V5T3E2 Canada

© 2023 Sekura Global. No endorsement of Sekura solutions has been made by any manufacturers of the display merchandise shown.