

5

2

## sekura-global.com E: sales@sekura-global.com

# BoxGrip **One**<sup>™</sup>

# **○** Applying the BoxGrip<sup>™</sup> **One**

Position the merchandise on a flat surface. Expand the BoxGrip<sup>™</sup> by pulling the locking mechanism away from the backing disc.


OneBl

Place two of the cables over one corner of the box and wrap the other two around the other side.

Center the BoxGrip<sup>™</sup> locking mechanism on the front of the product with one cable around each side of it.

# To lock and arm the BoxGrip™ depress the lock button until there is a 'click'.



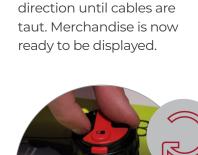







X

E







Make loss prevention simpler, safer and **Sekura** 

# 🛄 User Guide



# **∦** Releasing the BoxGrip<sup>™</sup> One

# The BoxGrip<sup>™</sup> can be used with a variety of detachers, view the correct instructions for your detacher.

#### S3 Key

- Place the detacher onto the BoxGrip<sup>™</sup>. When the tag makes contact with the detacher, the button pops out automatically.
- 2
- Pull away the BoxGrip<sup>™</sup> from the merchandise and it will retract neatly ready for reuse.



## **Commander Detacher (Superlock)**

- Place the detacher onto the BoxGrip<sup>™</sup>. When the tag makes contact with the detacher, the button pops out automatically.
- Pull away the BoxGrip™ from the merchandise and it will retract neatly ready for reuse.





The grooves on the push button have been added to provide better grab for the user to assist by **manually** pulling if necessary. If the button does not release completely to allow the removal, please grab and pull on the button grooves on each side of the button.

