

Make loss prevention simpler, safer and **Sekura**

🛄 User Guide

Mini LynxLocTM plus

2

2

♦ Applying the Mini LynxLoc[™] Plus



Pass the end of the lanyard through a secure part of the merchandise such as a handle or buckle. Connect the lanyard tip into the opening of the Mini LynxLocTM **Plus** casing. (The tip is Omni-directional and can be inserted from any angle)

PLEASE NOTE: The Mini LynxLoc[™]**Plus** will <u>not</u> beep when inserting the lanyard tip.



When the tip clicks into position the Mini LynxLoc[™] **Plus** is now locked and ready to merchandise.

X

CE

IMPORTANT: The Mini LynxLoc[™] **Plus** is always active and will alarm if the cable is being cut (the LED flashes continuously, regardless if the lanyard is in or out)





✓ Releasing the Mini LynxLoc[™] Plus



Place the clutch onto the centre of the detacher.

Gently pull the lanyard to release it and disarm the Mini LynxLoc™ **Plus.**







The product is now ready to be sold.



© 2023 Sekura Global. No endorsement of Sekura solutions has been made by any manufacturers of the display merchandise shown.

