

safer and **Sekura** 

## 🛄 User Guide

## **I**MEGALOC<sup>™</sup> Universal Razor Blade Safer

## **O** Loading merchandise into safer

 
C E 🛛 🕱

sekura-global.com

E: sales@sekura-global.com

Open the safer by placing the clutch onto the detacher.







6		
	-	
	-	

Close the safer firmly until a click is heard, meaning the clutch is engaged and fully locked.







## ${\cal F}$ Releasing merchandise from safer

When the safer is on the detacher, press the grey button next to the lock to release. Note: The lock will automatically release without pressing the button on Black, Green, or Yellow button versions





Open the safer, and remove the blister pack.

