


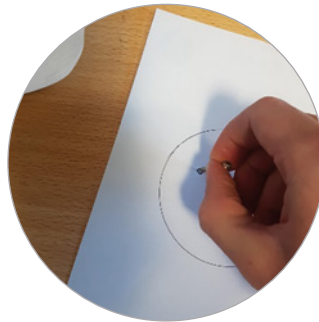



MEGALOC™ Installation

Applying the Detacher

-  Place template on cash desk in desired location of the detacher.
IMPORTANT: Allow minimum 2" clearance from all other items such as cash registers and scanners.
-  Mark bolt hole locations through sheet using the markings on the template.
-  Remove template and drill bolt holes.




-  Screw bolts into base of detacher. Thread nuts onto bolts and screw up from underneath the POS until tight.
-  Use pliers or a wrench to securely tighten each nut.

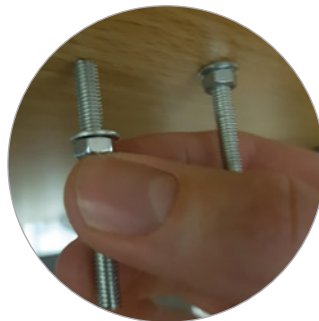

CAUTION: EXTREMELY powerful magnet. Do not place magnetic media such as credit cards near the detacher as this may erase the magnetic strip.

PACEMAKER WARNING: It is not recommended that people with pacemakers use this technology.

🔧 Base Template

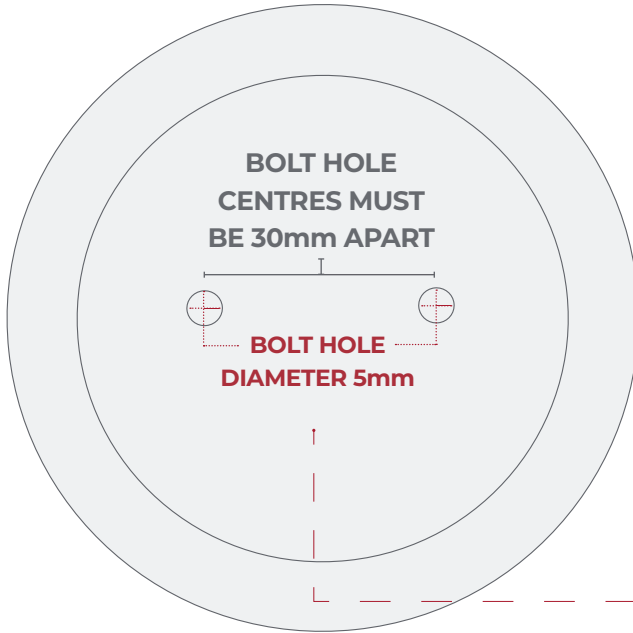

Important

Ensure the Detacher is placed with a minimum 2" clearance from all other surface mounted items such as cash registers and barcode scanners. Also 14" clearance is required above the detacher to enable the unlocking of safer cases of various sizes.



BASE TEMPLATE

Prints/copies of the base template should only be used as a guide to mitigate the margin of error from differing printer set-ups/output.

ALWAYS FOLLOW AND CHECK THE MEASUREMENTS SHOWN ON THE DIAGRAM.

🔧 Using the Detacher Lock

1 To engage the detacher key in the lock, insert and twist the T-bar a quarter turn.



2 To remove the lock from the detacher, pull firmly on the T-bar when it is engaged in the lock.



3 To disengage the detacher key from the lock, twist the T-bar a quarter turn again. The T-bar will come loose and can be stored safely. To replace the lock, follow these steps in reverse.



Head Office

Aspen House
Stephenson Road
Colchester, Essex
CO4 9QR
United Kingdom

Sekura Global LLC
98 Cuttermill Road Suite
466 S
Great Neck NY 11021
USA

Sekura Global GmbH
Alt-Heerdt 104
40549
Düsseldorf
Germany

Sekura Global PTY LTD
Level 6
10 Herb Elliott Ave
2127, NSW
Australia

Sekura Retail Solutions INC
2416 Main Street
Suite 398
Vancouver BC V5T3E2
Canada